

Assembly instructions for side panels njufront.pl to the IKEA METOD system

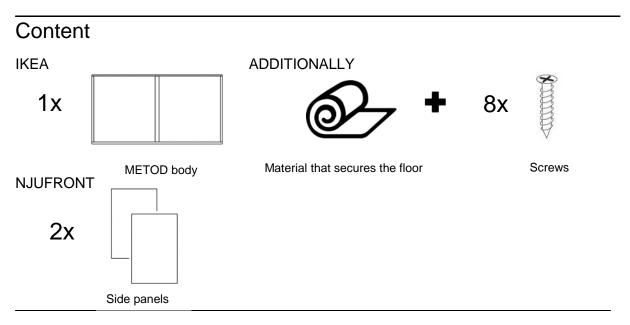

Order of assembly

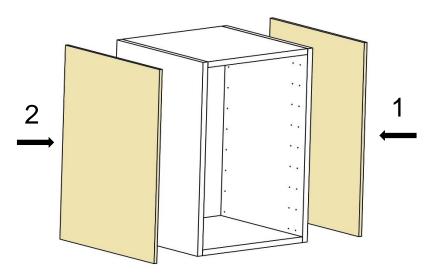





Please follow the safety instructions attached to the furniture. It is recommended to install the METOD bodies to the wall using the anchor brackets supplied with the IKEA cabinet, especially in the case of high-quality fronts.



Side panel assembly

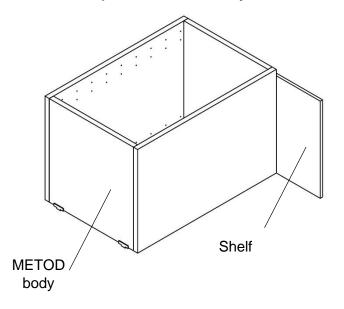

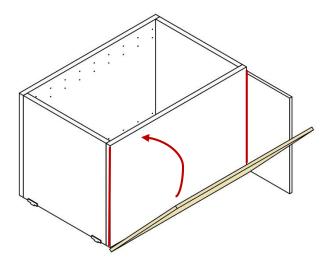


Before mounting, make sure that the surfaces of the elements are clean and free from contamination.

Position the body of the furniture so that the rear wall is on the ground. Using one of the elements, for example a shelf positioned along the upper part of the cabinet, determine the parallel position of the panel in relation to the upper part of the cabinet.

Place the assembled element in a suitable place so that its edges adhere to the furniture body.




Side panel assembly

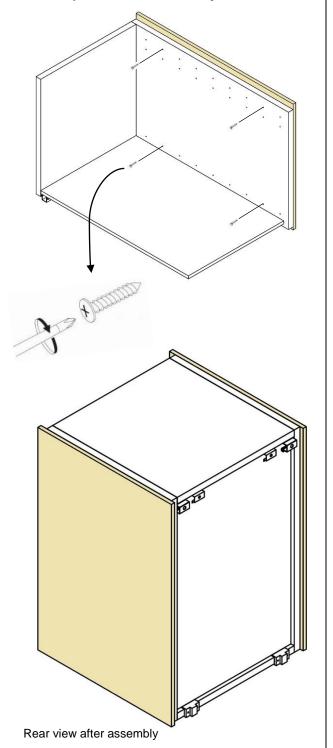

Secure the panel with screws by placing them on the inside of the body.

For fixing screws for side panels, you can use the holes under the shelves.

When screwing the screws, press the panel to the body with your hand. If you have one, you can use a carpentry clamp for this purpose.



Place the screws as evenly as possible.



During assembly



Before assembly, the surfaces of the elements should be cleaned with a soft, damp microfiber or cotton cloth.



When assembling panels and fronts, avoid shocks with hard or sharp objects that may permanently damage the surface of the varnish.



Avoid exposing the surface of painted parts to contact with sharp objects.



Avoid bumping the elements against the ground. When laying down the elements, soft-material should be used to protect them against damage.



Do you have questions or concerns about assembly? Contact us by phone 606 402 112 or by e-mail biuro@njufront.pl. We will try to help.

Cleaning



Avoid using undiluted or concentrated detergents with a strong effect; acetone, ammonia, alcohol and other abrasives cleaning agents.



Avoid using bristles with hard bristles; abrasives in the form of pastes and powders; sponge for scrubbing and sharp cloths.



Surfaces should be regularly cleaned with a soft, damp microfiber or cotton cloth, using a mild cleaning solution for painted surfaces. After cleaning, wipe the front with a damp cloth and wipe dry.

